



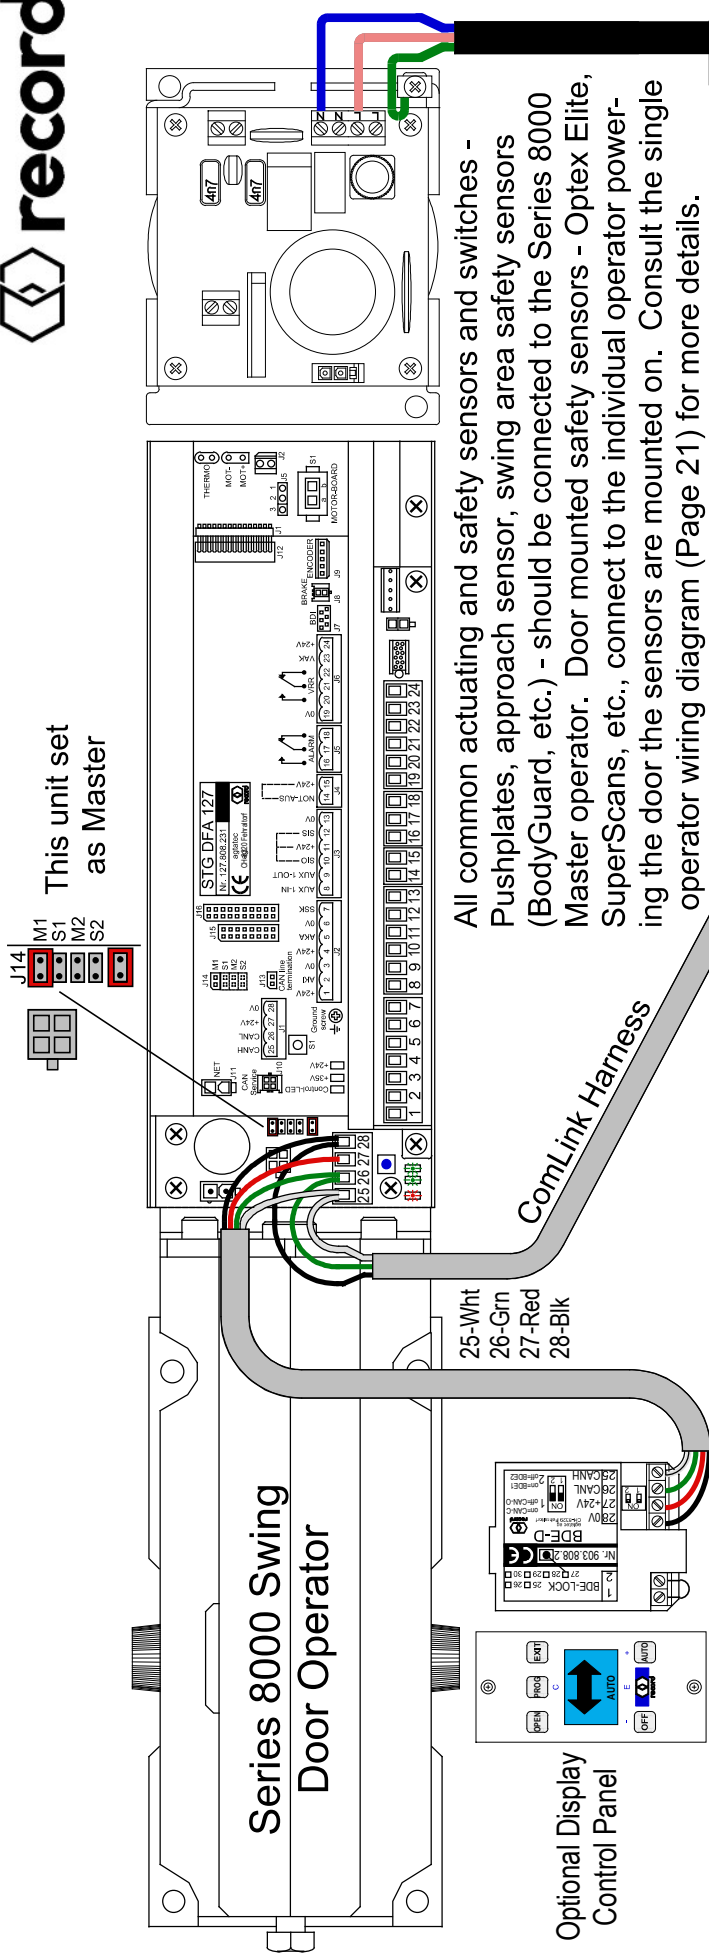

120VAC HARNESS

If no Rocker Switch is connected to the Slave Operator, its parameter "Control Panel / Mechanical Panel" must be set to "0 3 Pos. (AUTO)"

The Lock Relay Output of both operators function identically.

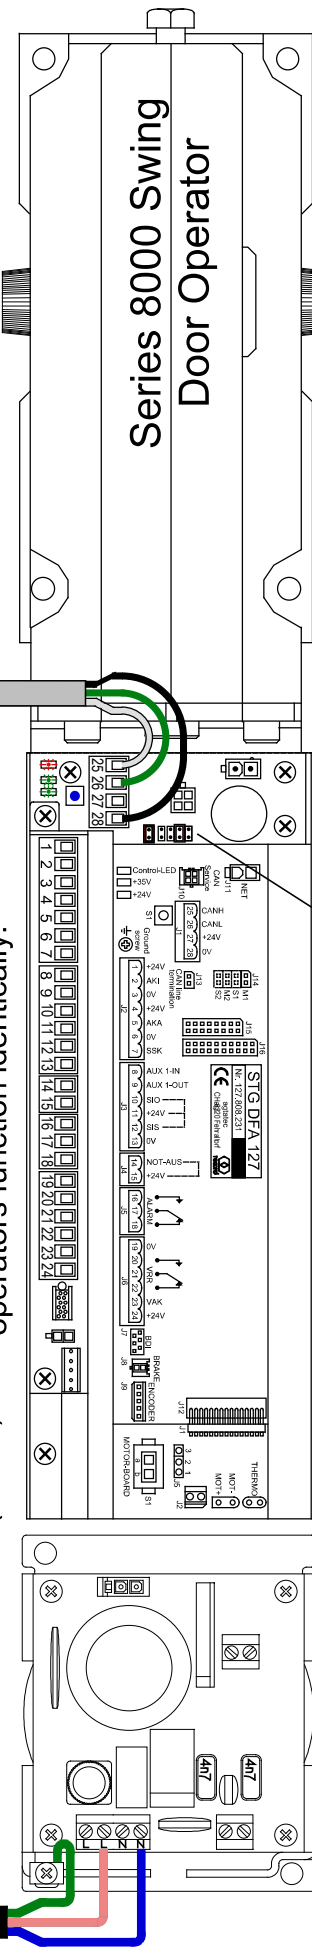

INTERCONNECT WIRING SERIES 8000 SWING PAIR

10SEP07 DPH